

Electrolux Installation Instructions* for French Door Bottom Freezer/Refrigerator

*Please refer to your Use & Care Guide for more details.

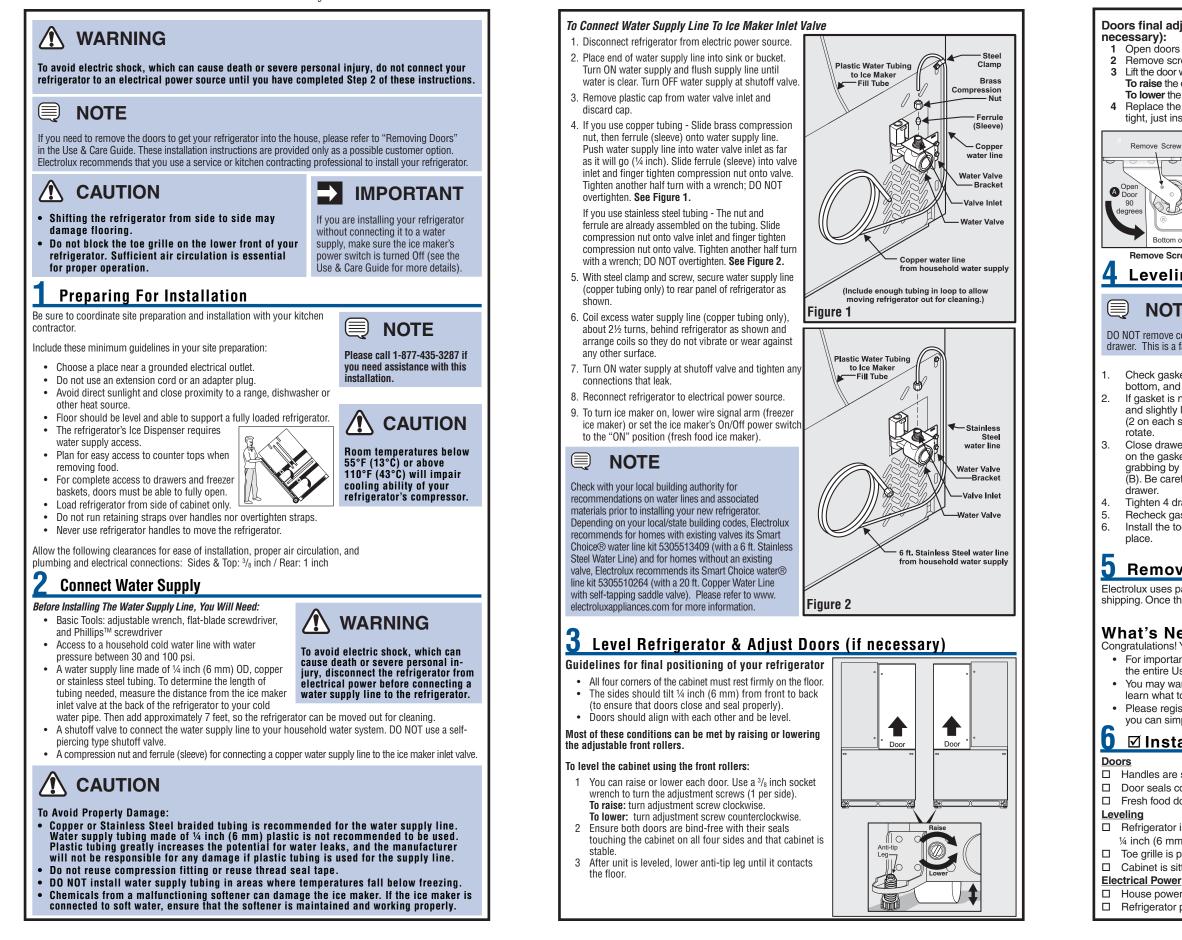

If you are not satisfied with the installation of your refrigerator, please contact the store where you purchased it or call 1-877-435-3287 for assistance.

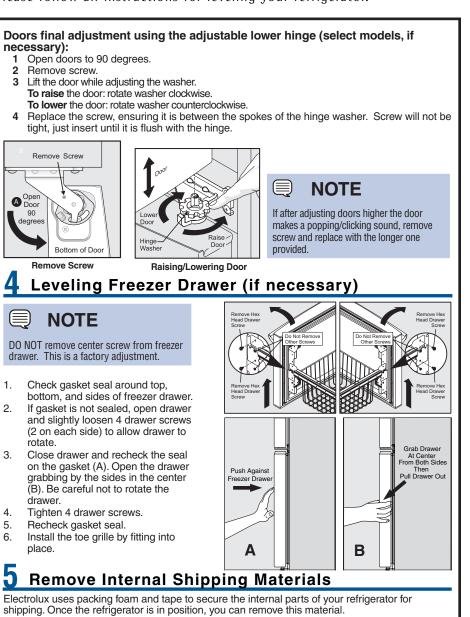

What's Next?

rotate.

Congratulations! You are ready to begin enjoying your new Electrolux refrigerator.

- For important safety instructions and to learn how to operate your refrigerator, please read the entire Use & Care Guide.
- · You may want to start with the "Normal Operating Sights & Sounds" section of the Guide to learn what to expect during typical operation.
- Please register your product. You can register online at www.electroluxappliances.com. or you can simply send in the Registration Card.

☑ Installation Check List

Ice Maker

Final Checks

- Handles are secure and tight
- Door seals completely to cabinet on all sides □ Fresh food doors are level
- □ House water supply connected to refrigerator
- No water leaks present at all connections Ice Maker is turned ON.
- Refrigerator is level, side to side and tilted
- 1/4 inch (6 mm) front to back
- Toe grille is properly attached to refrigerator
- □ Cabinet is sitting solid on all corners
- House power turned on
- Refrigerator plugged in

- □ Shipping material removed
- Fresh Food and Freezer temperatures set